



AUTOSTACKING FRACTIONS IN MTEXT

Just put a forward slash between numbers (example: 1/20) in MTEXT and Highlight it, THEN right-click, Click on the icon for stack options. Use a lightning bolt icon for further control the stacking

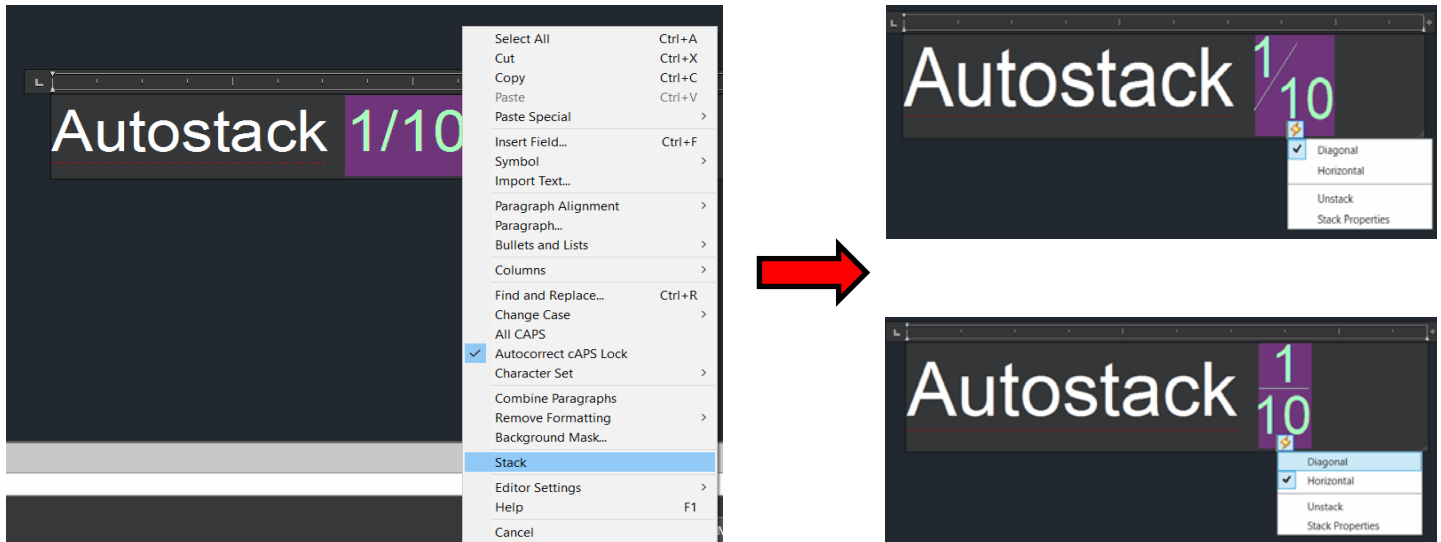

Use Stack and AutoStack properties to further control the stacking.

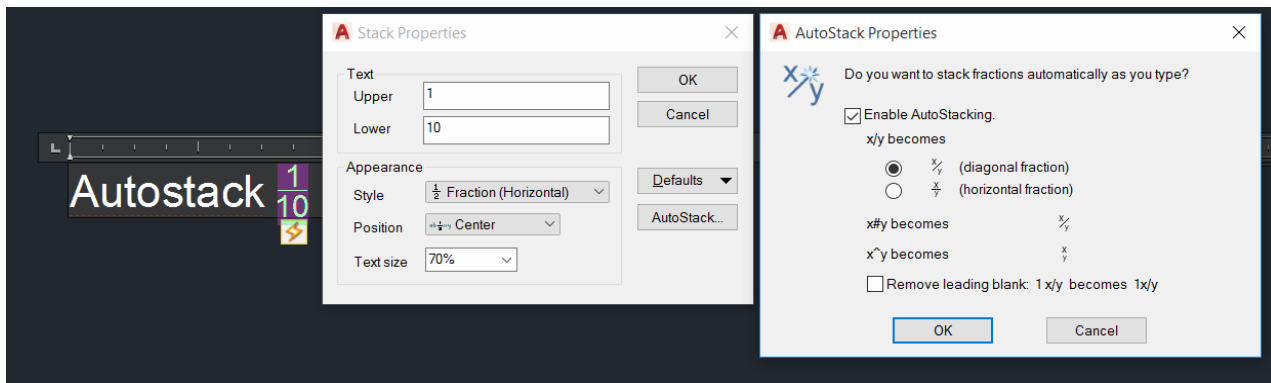

Tip:

When you enter a fraction and press the spacebar, a lightning bolt icon is displayed.

- To change default format for stacked fractions: Click the lightning bolt > Stack Properties and make changes in the Stack Properties dialog box.
- To temporarily change the format setting: Click the lightning bolt > Horizontal or Diagonal.